


Assembly of micro-solenoid valve (blank plate) and manifold


Mount micro-solenoid valve and manifold by two M2.5 screws as following .

Mount blank plate and manifold by two M2.5 countersunk screws as following .

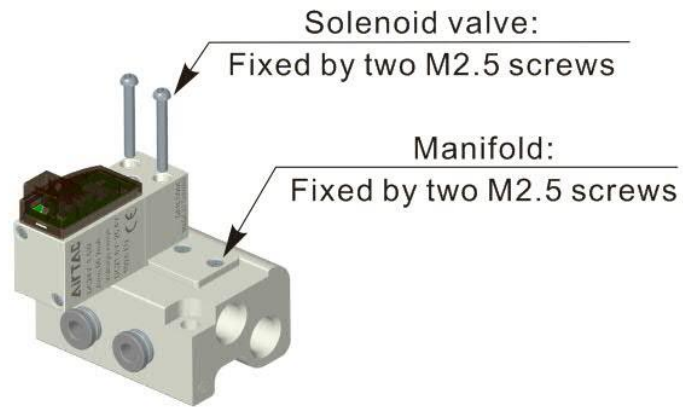

Expansion of micro-solenoid valve

Remove blank plate and install solenoid valve by the assembly instruction.

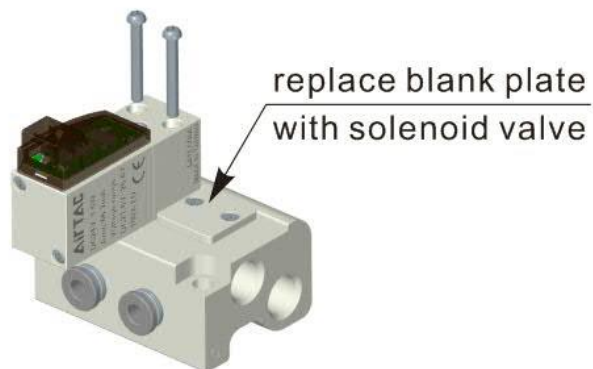

A port tubing

A port is at the side of manifold with push in fittings



A (with push in fittings)
(PT, G thread: $\Phi 4\text{mm}$
NPT thread: $\Phi 5/32''$ tube)

Manifold mounting

Both sides of manifold attach two installing through-holes, using two M4 hexagon cap screws to fix.

Installing through-holes
(using two M4 hexagon cap screws to fix)

